

# Connecting to a Musical Instrument


## Connecting to the USB port

### Available functions

- **Piano Remote Controller**  
Used to check and change the piano settings
- **PDF Score Viewer**  
Page turning with the pedal provided or an optional pedal unit  
\* Not available on the PX-870/770 or AP-470/270.
- **MIDI Player**  
Transfers built-in songs from the app to the user area on the piano  
\* The following models feature a user area on the musical instrument itself:  
AP-470, AP-270, PX-870, PX-770, CDP-S90, CDP-S100, CDP-S150, CDP-S350, PX-S1000, PX-S3000

### Connection ports on the piano

The connection port layout differs depending the model used.

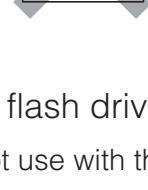

USB flash drive port

Do not use with the app.



USB port

Connect to this port.


### Required Cables

We advise that the cable recommended by the smart device manufacturer be used.

Check the connectors on the smart device on which you installed the app.




#### Lightning connector

iPhone/iPad

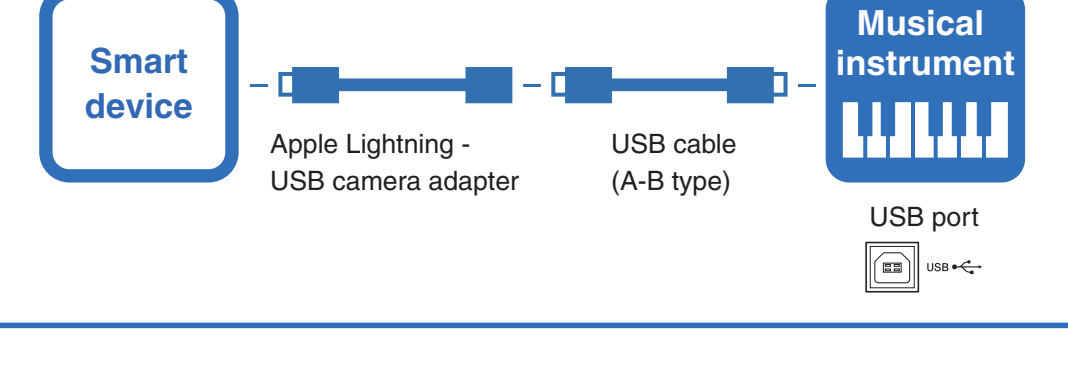



#### USB-C port

iPad/Android

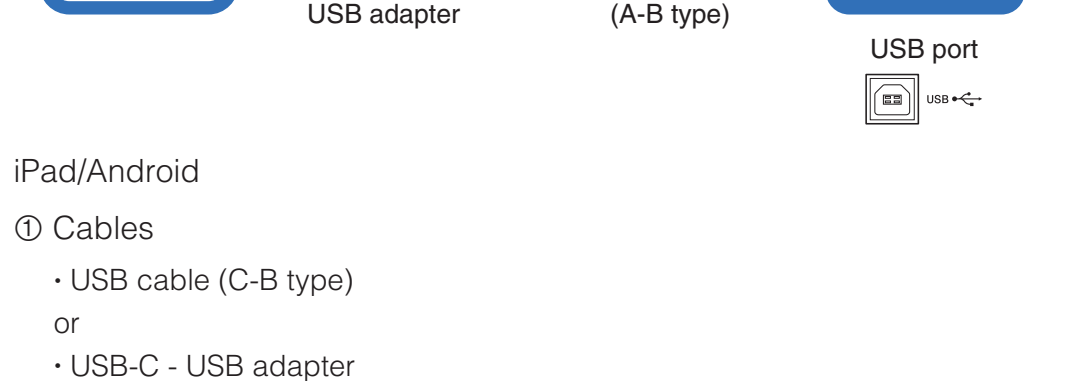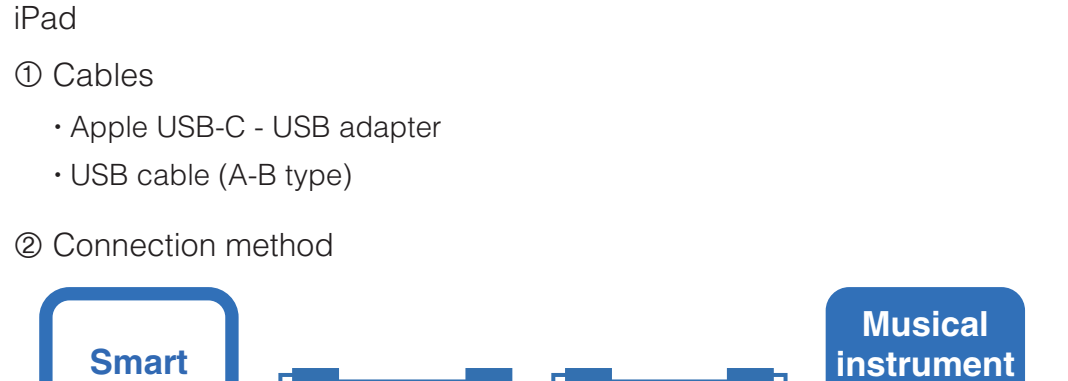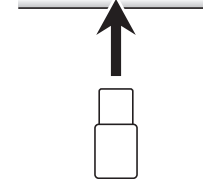


#### USB-micro B port

Android

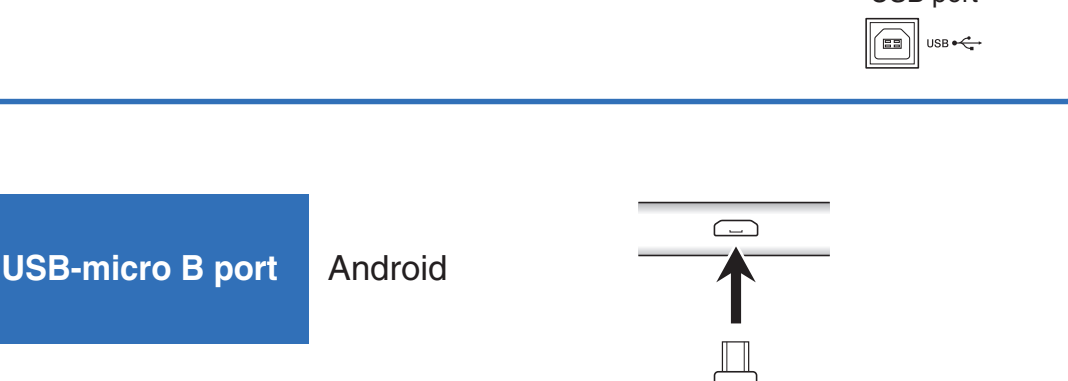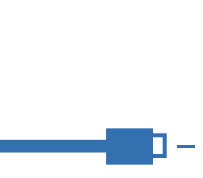


### When the connection is successful

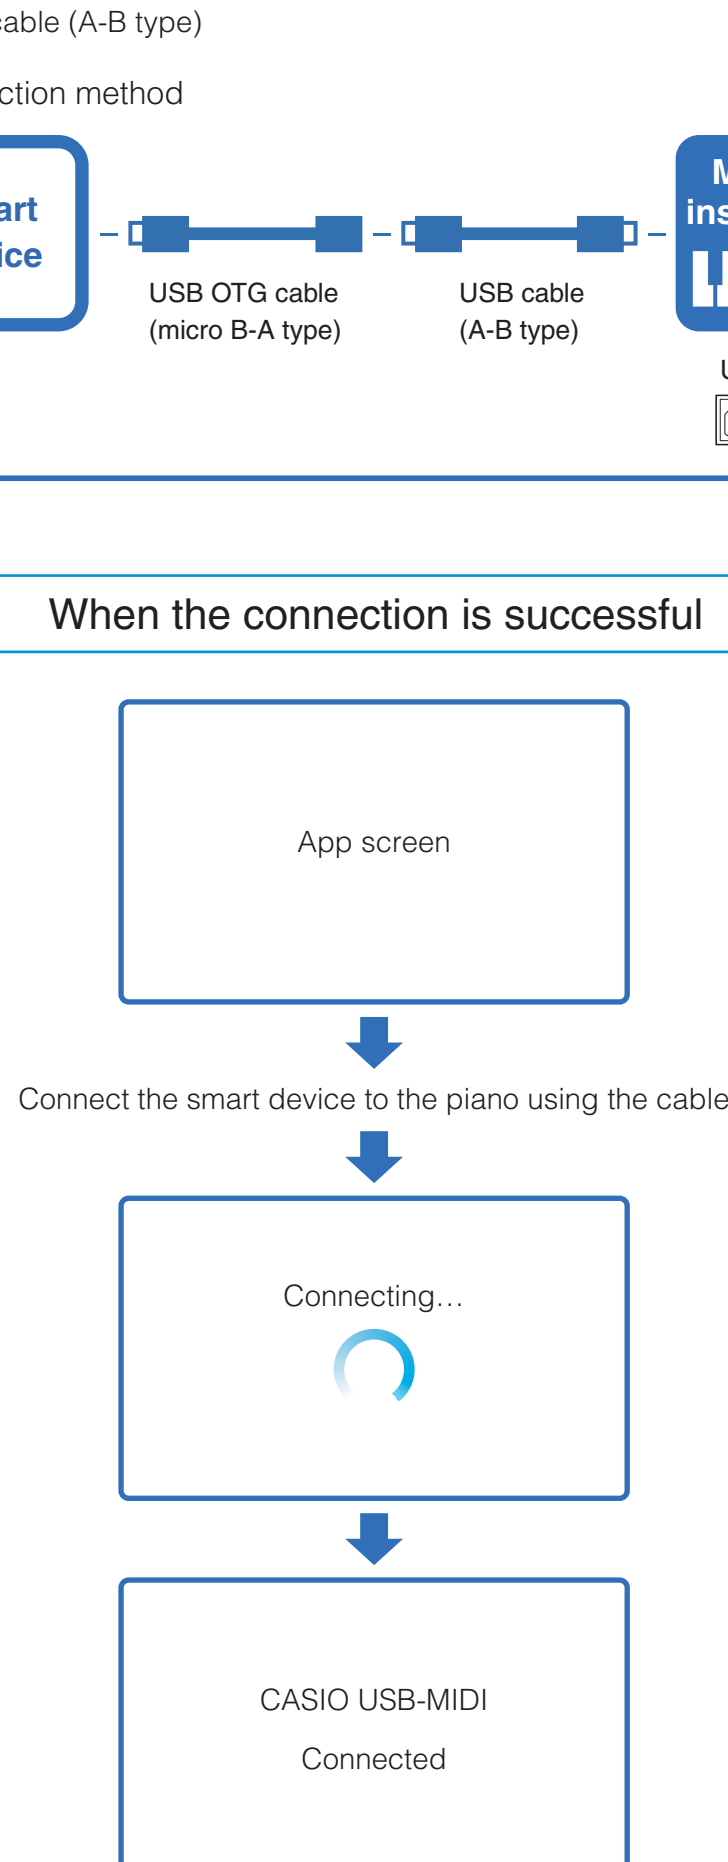

- \* If you cannot connect successfully, check the following:
- Is the cable connected correctly? (Are you using the correct port?)  
→ Check "② Connection method" in "Required Cables" in this document.
  - Are you using an unsupported cable/adapter?  
→ Check "① Cables" in "Required Cables" in this document.
  - Are you using an Android device that does not support USB-MIDI?  
→ Smart devices that display an alert message that USB-MIDI is not supported during app installation cannot connect to the piano.

### To check whether your Android device can be connected

Smart devices that display the message shown below the first time app installation begins cannot connect to the piano.

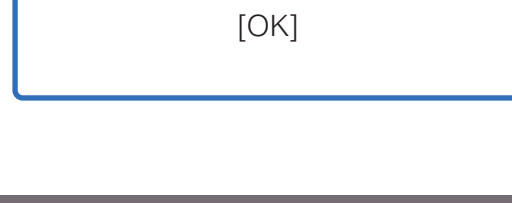

## Connecting to the AUDIO IN jack

### Available functions

- **Audio Player**  
Lets you play along to music on your smart device.  
\* Not available on the PX-870/770 or AP-470/270.

### Required Cables

We advise that the cable recommended by the smart device manufacturer be used.

Check the connectors on the smart device on which you installed the app.



#### 3.5 mm headphone jack

iPhone/iPad/  
Android



#### Lightning connector



iPhone

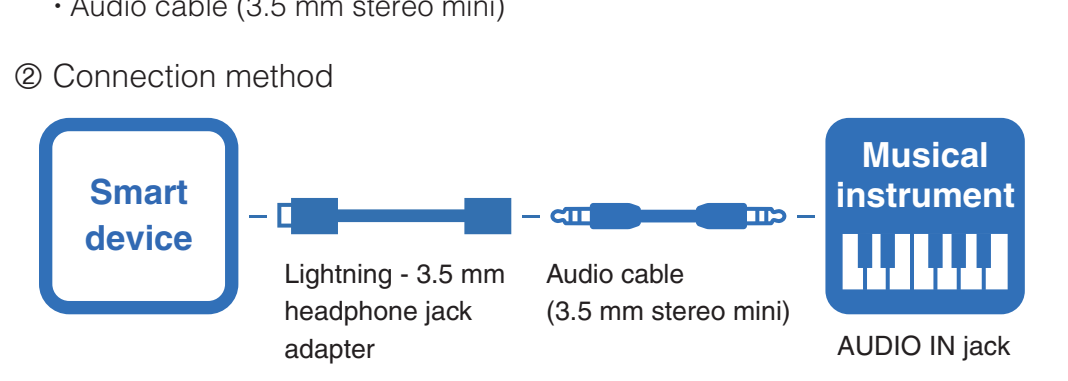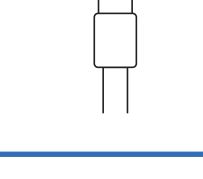

\* Some iPhone models are not bundled with a Lightning - 3.5 mm headphone jack adapter.

#### USB-C port

iPad/Android

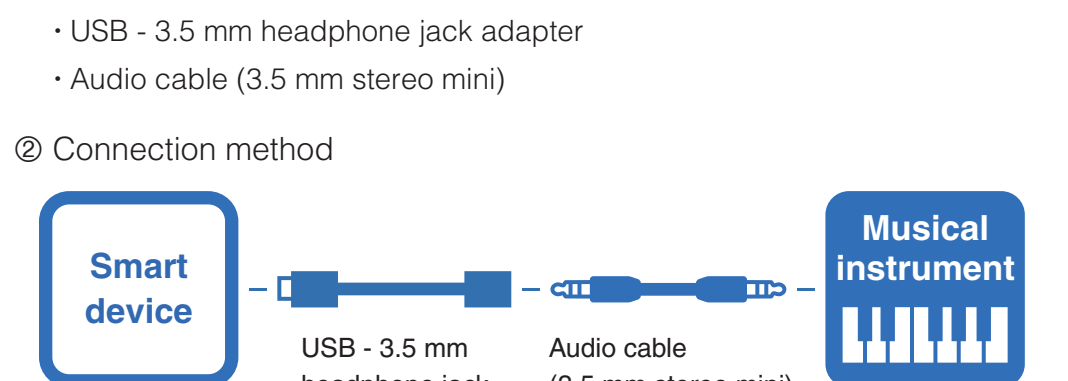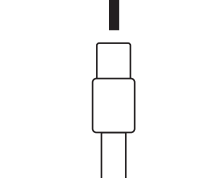

\* Use the standard USB - 3.5 mm headphone jack adapter for your smart device. Some adapters may not work.

## Connecting via Bluetooth

### Available functions

- **Audio Player**  
Lets you play along to music on your smart device.  
\* Only supported on the PX-S1000/3000.

### No cables are required

For more information on the Bluetooth connection method, refer to the User's Guide for your musical instrument.