


2.3 Connecting via a Bluetooth Adapter (CASIO WU-BT10)

This app enables you to connect via Bluetooth MIDI to supported CASIO keyboard models using the optional Bluetooth adapter (CASIO WU-BT10). Once you have connected to the keyboard, you can use Lesson Mode playback while linked to the keyboard and transfer songs to the keyboard.

● Getting Ready

- Once you have connected the Bluetooth adapter (CASIO WU-BT10) to the CASIO keyboard, take the next steps using the Lesson Mode screen.
- See the manuals for the keyboard and the WU-BT10 for information on the connection method.


[Top menu screen]

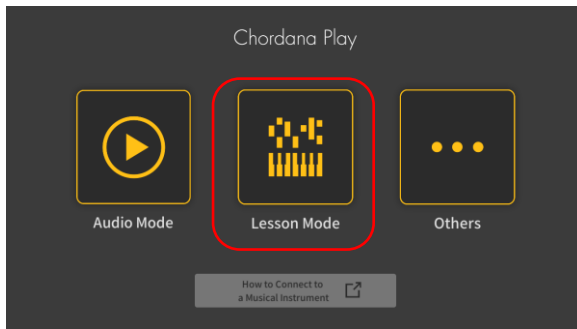

1. Tap Lesson Mode.




[Lesson Mode screen]

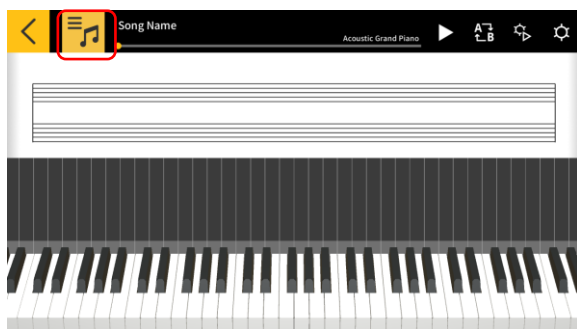

2. Select a song.




[Lesson Mode screen]

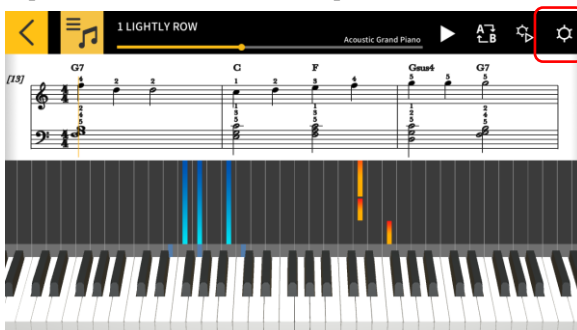

3. Tap the Settings button.



[Settings screen]

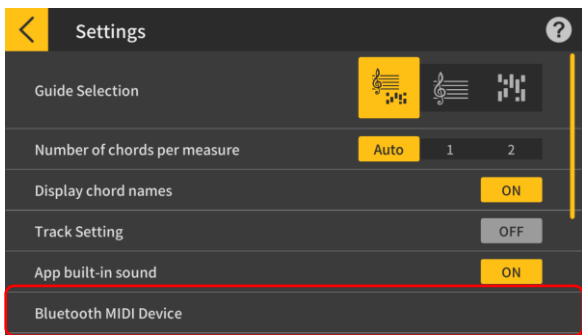

4. Tap Bluetooth MIDI Device.




[Bluetooth MIDI device connection screen] *iOS



5. The available Bluetooth MIDI devices are displayed. Tap the Bluetooth MIDI device to be used in the list to connect to the device. If you are using the CASIO WU-BT10, tap “WU-BT10 MIDI”. Once you are successfully connected, the connection completed dialog box appears.

[Bluetooth MIDI device connection screen] *Android

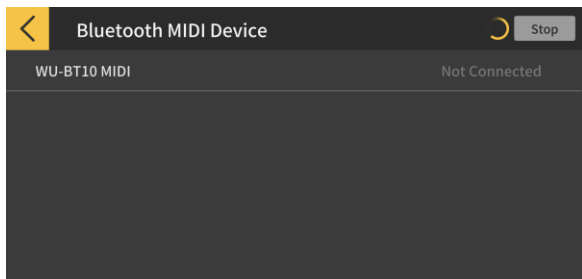

Important!

- The connection procedure above may be necessary each time you use a Bluetooth MIDI device.
- If no Bluetooth MIDI devices are shown on the list, check that Bluetooth is enabled on your smart device and on the musical instrument.
- In the Android version, you will need to permit access to the location information on your smart device when you connect.
- When you make a Bluetooth MIDI connection, or when you select Lesson Mode while connected via Bluetooth MIDI, the Bluetooth audio connection with the supported model(*) is canceled. When you exit Lesson Mode, the Bluetooth audio connection to the supported model is restored. (*Supported models: CT-S1, CT-S400, CT-S410, LK-S450)